

INSTRUCTION PACKAGE

MAKE YOUR CREATIVITY STICK

CRYSTALLIZED™ Flat Backs applications for fun and the long run

1. Everything you need to know about GLUING



Gluing is used for the application of CRYSTALLIZED™ Flat Backs No Hotfix, as well as for decorating accessories with special motifs, and applying Crystal-it to paper and cardboard.

1.1. Application of CRYSTALLIZED™ Flat Backs No Hotfix

You can use CRYSTALLIZED™ Flat Backs No Hotfix, for gluing onto gemstones, metal, plastic, wood and many other materials. Always make sure that the surface is clean and that you use the correct amount of glue. Use tweezers or a wax stick for applying the stone to the surface.

Steps:

- I. The surface must be cleaned properly before gluing.
- II. The glue should be applied with a dispenser.
- III. Pick up the stone with the tweezers.
- IV. Carefully place the stone in the correct position and press it down gently.

Hardening


Curing time and final gluing strength are dependent on the temperature. At room temperature the complete curing time is 24 hours. The time can be accelerated with warmth in an oven up to 1 hour (max. 100 °C / 212 °F).



1.2. Creating motifs with CRYSTALLIZED™ Flat Backs No Hotfix

To use CRYSTALLIZED™ Flat Backs No Hotfix in combination with a special foil for motifs to decorate accessories, for example, follow these steps:

- I. Peel off the white protective film and position the Flat Backs with the flat side upwards on the carrier foil for your own motif.
- II. Apply the correct amount of glue.
- III. Position the motif on the pre-treated and clean surface.
- IV. To keep the motif even, spread a soft cloth over it and then weigh it down.
- V. After the glue has hardened, you can remove the transparent film.

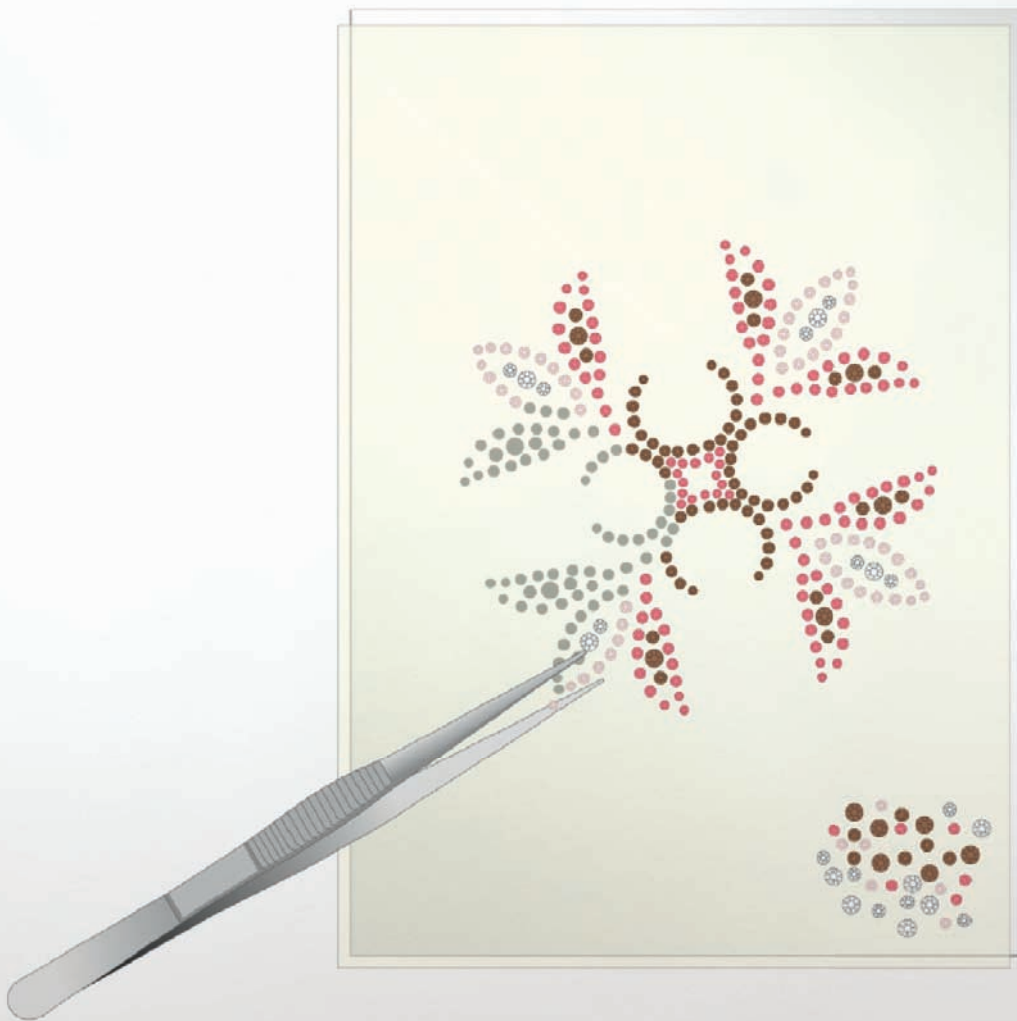

2. Everything you need to know about DECORATING PAPER




Application of Crystal-it

Crystal-it is used for the decoration of paper and cardboard. It is very easy to apply thanks to specially developed glue suitable for paper and cardboard.


Instruction:

Steps:


- I. Press the crystals firmly onto the film, so that all the crystals adhere to it. Carefully separate the two layers of film. If some of the crystals remain on the white film, please repeat this step.

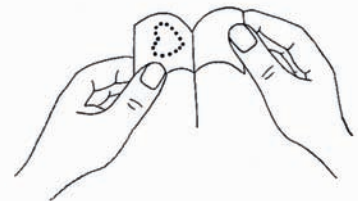

- II. Put the crystal motif with the transparent film into the required position.

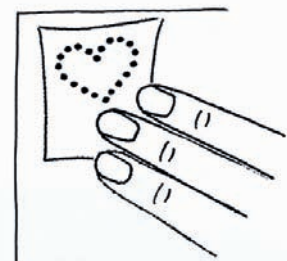

- III. Press the crystals firmly onto the surface. Immediately afterwards pull off the transparent film slowly and at a shallow angle.

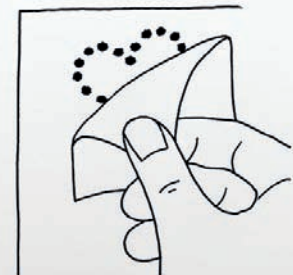

- IV. After removing the transparent film, press the crystals firmly onto the surface again.

